

BOGATIĆ AD 2.1 LOKACIJSKI INDIKATOR I NAZIV AERODROMA
AERODROME LOCATION INDICATOR AND NAME

BOGATIĆ

1	<i>Koordinate ARP-a / položaj na AD</i> <i>ARP coordinates / site at AD</i>	444936N 0192959E / centar RWY 444936N 0192959E / center of RWY
2	<i>ELEV / Referentna temperatura</i> <i>ELEV / Reference temperature</i>	276 FT (84 M) / 28.9°C (JUL)
3	<i>GEO BRG i dimenzije RWY/ dimenzije osnovne staze</i> <i>GEO BRG and RWY dimensions/ strip dimensions</i>	180°/360° 400×20 M / 460×40 M
4	<i>Namena</i> <i>Purpose</i>	Za sletanje i poletanje i kretanje vazduhoplova maksimalne sertifikovane mase na poletanju ne veće od 2370 KG, ali bez obavljanja javnog avio-prevoza putnika ili obuke pilota, prema pravilima vizuelnog letenja (VFR), danju. For landing and take-off and movement of aircraft with Maximum Certificated Take-Off Weight not more than 2370 KG, without performing commercial air transport of passengers or the pilot training, according to Visual Flight Rules (VFR) by day.
5	<i>MAG VAR (datum informacije) / Godišnja promena</i> <i>MAG VAR (date of information) / Annual change</i>	5°E (2025) / +5.0'
6	<i>Operator AD, adresa</i> <i>AD Operator, address</i> <i>TEL:</i>	Dražić Mladen Mike Vitomirovića 138 15350 Bogatić Srbija / Serbia +381 65 541 1610
7	<i>Napomene</i> <i>Remarks</i>	1. Prepreke: - ispred THR 18 postoji dalekovod, koji nije u funkciji, sa stubovima visine oko 9 M. 2. Zbog postojanja prepreka, postoje ograničenja: - poletanje sa THR 18 i - sletanje na THR 36. 3. Za poletanje i sletanje helikoptera se koristi RWY. 1. Obstacles: - In front of THR 18 is transmission line, not in use, with columns height of about 9 M. 2. Due to the obstacles, there are some restrictions: - take-off from THR 18 and - landing on THR 36. 3. RWY is used for landing and take-off of helicopters.